


FLEXPOST-XL™ ASSEMBLY INSTRUCTIONS FOR XL-B52/6, XL-B52/8, and XL-B52/9


BEFORE STARTING, MAKE SURE YOUR BASE IS ANCHORED (SEE BASE ANCHORING INSTRUCTIONS)



- Slide collar halfway up the post
- Do not tighten, you will need to re-adjust this later

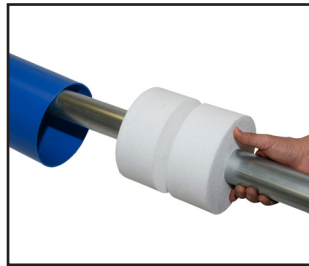



- Slide foam rings 5" up the post

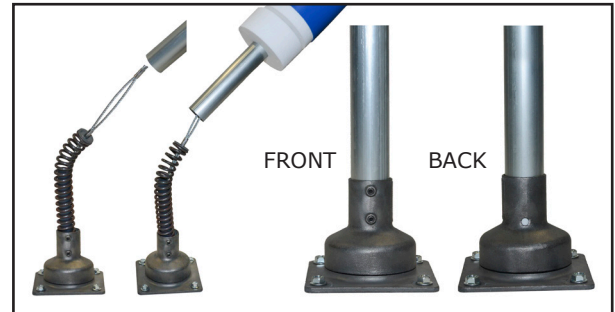

- Foam ring side down, insert the post onto the base. Rotate clockwise while sliding the post down until it is fully seated at the bottom



- Make sure the post is fully visible in the back window of the base.

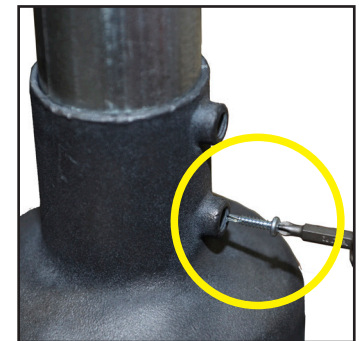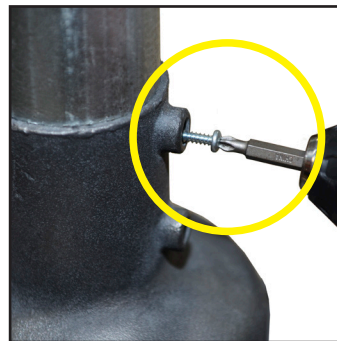

- Using a power drill, screw in both of the provided self-tapping set screws into the front two holes to secure the post to the base



- Using provided allen key, screw the grub screws into the base to secure the pole



- Grub screws may stick out from the base. This is not a problem. Do not over tighten.



- With collar flush with top of bollard, tighten set screw with provided allen wrench.



339 1/2 Centre St., Petrolia, ON N0N1R0
888-307-6610 • www.flexpost.ca