

FLEXPOST-XL™ ASSEMBLY INSTRUCTIONS FOR XL-B32, XL-B52, and XL-B72


BEFORE STARTING, MAKE SURE YOUR BASE IS ANCHORED (SEE BASE ANCHORING INSTRUCTIONS)



- Place black cap on the post



- Using a power drill, drill the self tapping screws into the post to secure the black cap

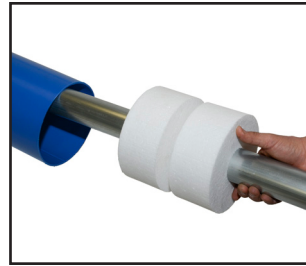


- Slide foam rings 5" up the post on the opposite end of the black cap




- Foam ring side down, insert the post onto the base. Rotate clockwise while sliding the post down until it is fully seated at the bottom



- Make sure the post is fully visible in the back window of the base

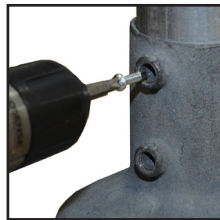

- Using a power drill, screw in both of the provided self-tapping set screws into the front two holes to secure the post to the base

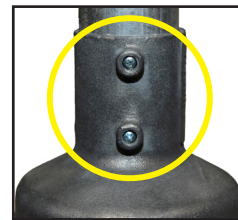

- Using the provided allen key, screw the grub screws into the base to secure the pole



- Grub screws may stick out from the base. This is not a problem. Do not over tighten.



- Slide bollard cover down over the foam ring and base plate



- Tighten the cap screw onto the black cap to secure the black cap to the bollard cover **DO NOT OVER TIGHTEN!**

**FLEX
POST**

339 1/2 Centre St., Petrolia, ON N0N1R0
888-307-6610 • www.flexpost.ca