

STANDARD FLEXPOST™ ANCHORING INSTRUCTIONS FOR ADHESIVE

Tools Required:

- Marker
- Gloves
- Standard Caulk Gun
- Rag


Parts Included:

- 1 Base Plate
- 1 MasterWeld 948


NOTE: THIS ADHESIVE PRODUCT IS NOT INTENDED TO BE USED ON ASPHALT
WARNING: MUST ANCHOR UNIT ON THE SAME LEVEL AS THE PARKING LOT FOR PROPER FUNCTIONALITY



- *Ensure that the application area is free of dirt, grease, oil, and moisture*
- *Place the base in desired location and use a wax pencil or marker to outline the exterior of the base*

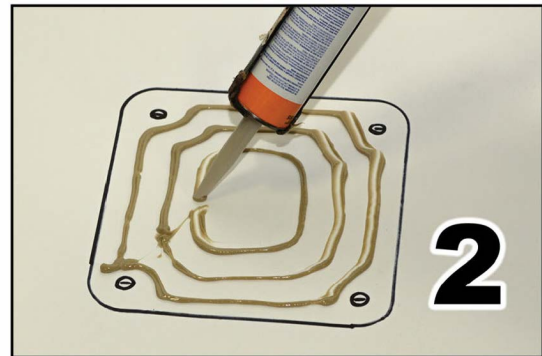

- *Using the MasterWeld 948, glue the area within the outline*

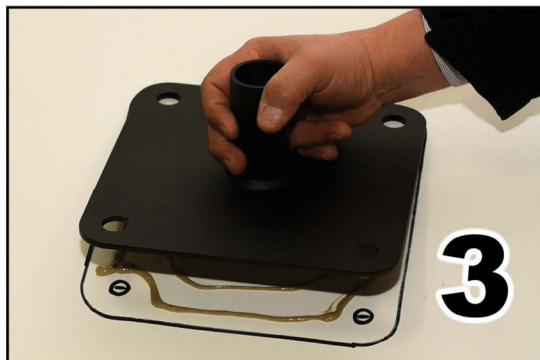

- *Place the base on the adhesive within the drawn lines*



- *Adhesive will come out the sides. Use a rag to wipe excess. Wait 24 hours for adhesive to be fully cured*

FLEX
 **POST**®

339 1/2 Centre St.
Petrolia, ON N0N 1R0
888-307-6610 • www.Flexpostcanada.ca