

STANDARD FLEXPOST™ ANCHORING INSTRUCTIONS FOR CONCRETE

Tools Required:

- Marker / Wax Pencil
- High Speed Power Drill
- 1/2" Masonry Drill Bit
- Socket Wrench with 3/4" drive


Parts Included:

- 1 Base Plate
- 4 Concrete Wedge Bolts


NOTE: PLEASE WEAR SAFETY GLASSES

WARNING: MUST ANCHOR UNIT ON THE SAME LEVEL AS THE PARKING LOT FOR PROPER FUNCTIONALITY

NOTE: DO NOT PLACE WITHIN 12" OF ANY CURB

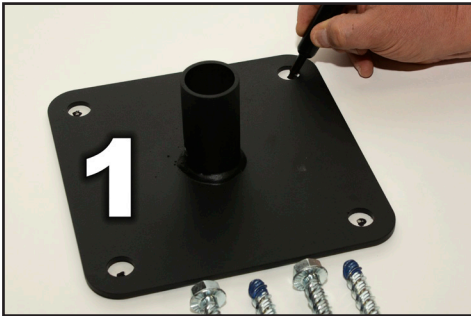

- Place base plate in desired anchoring location
- Mark the four base holes with a wax pencil

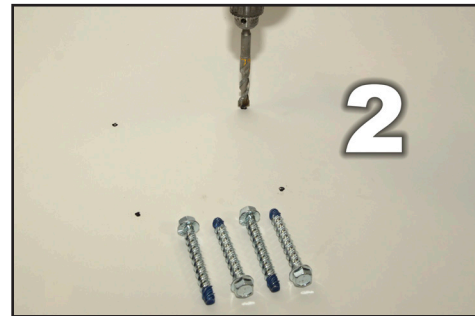

- Using a 1/2" masonry bit, drill 5" in depth



- Place the base plate over the four holes and use a socket wrench with a 3/4" drive to thread all four bolts



- Tighten all 4 bolts so the base plate is flush with the concrete

**FLEX
POST®**

339 1/2 Centre St., Petrolia, ON N0N1R0
888-307-6610 • www.flexpostcanada.ca